

ESSENCE FAN OPERATION

⚠ CAUTION: The fan will automatically restart at the last operating speed when power is restored.

Note: The fan may take 30–60 seconds to start rotating after it is turned on. It is normal to see “cogging” (abrupt direction changes) as the fan positions itself relative to the motor stator.


Wired wall controller

To start the fan, turn the control knob clockwise.

To stop the fan, turn the control knob counterclockwise.

To increase fan speed, turn the control knob clockwise. **To decrease fan speed,** turn the control knob counterclockwise.

Note: When the fan is turned on, the LED indicator at the top of the controller is lit. The LED will flash an error code if there is a problem with the fan.

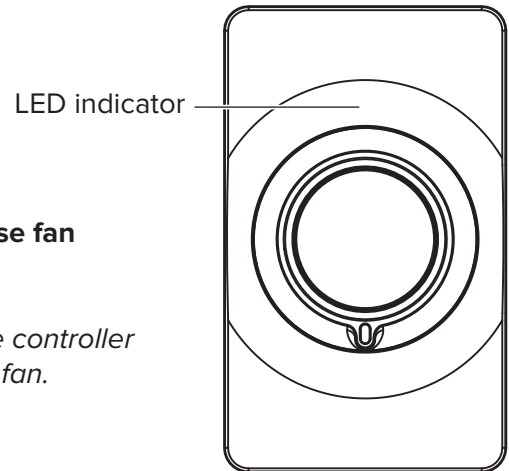

Wireless wall controller

To start the fan, press the On button. The fan will turn on to 100% speed.

To stop the fan, press the Off button.

To increase fan speed, press the Increase Speed button. **To decrease fan speed,** press the Decrease Speed button.

By default, pressing the center button sets the fan speed to 50%. **To program a preferred speed setting:**

1. Use the speed adjustment buttons to select the desired fan speed.
2. Press and hold the center button for approximately six seconds until the LED flashes to save the setting.

