




CASTER REPLACEMENT



TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS, OBSERVE THE FOLLOWING:


-  **WARNING: ELECTRICAL SHOCK HAZARD.** Disconnect the power supply before performing any service or maintenance. Failure to do so may result in serious injury or death.
-  **WARNING:** Ensure casters are locked before performing any service or maintenance.
-  **CAUTION:** The Big Ass Fans product warranty will not cover equipment damage or failure that is caused by improper installation or use.

COOL-SPACE® 350

Make sure casters are locked. Drain cooler and carefully tilt it forward until front of cooler is lying on the ground. Remove caster screws and replace casters.

When installing new casters, make sure the end of the diagonal caster bracket with elongated slots is on the **top right** and the end with round holes is on the **bottom left** when the cooler is lying on the ground. Make sure the two casters with brakes are at the **front** of the cooler (**on bottom** when the cooler is lying on the ground).

Tighten caster screws to **5 ft-lb (6.8 N·m)**. **Lock casters** and carefully stand cooler upright.

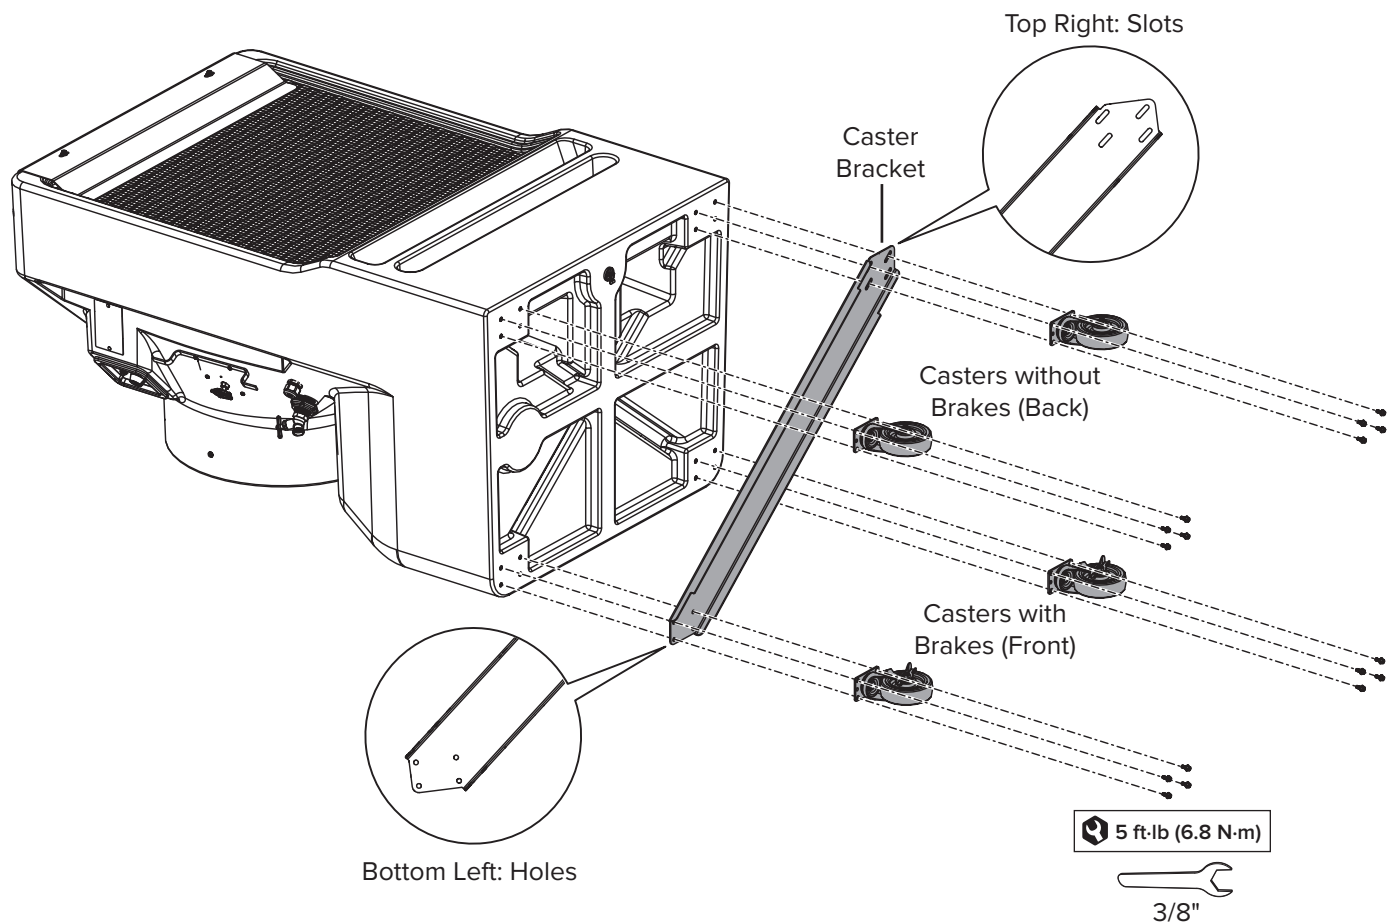

COOL-SPACE® 400 AND 500

Make sure casters are locked. Drain cooler and carefully tilt it forward until front of cooler is lying on the ground. Remove caster nuts and replace casters.

Make sure the two casters with brakes are at the **front** of the cooler (**on bottom** when the cooler is lying on the ground).

Tighten caster nuts to **5 ft·lb (6.8 N·m)**. **Lock casters** and carefully stand cooler upright.

NOTE: Cool-Space 400 shown. Procedure is the same for Cool-Space 500.

