## CASTER REPLACEMENT

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS, OBSERVE THE FOLLOWING:


- WARNING: ELECTRICAL SHOCK HAZARD. Disconnect the power supply before performing service or maintenance. Failure to do so may result in serious injury or death.
- MARNING: Make sure casters are locked before performing service or maintenance.
- MARNING: When service or replacement of a component in the fan requires the removal or disconnection of a safety device, the safety device is to be reinstalled or remounted as previously installed.
- **CAUTION:** The Big Ass Fans product warranty will not cover equipment damage or failure that is caused by improper installation or use.
  - 2

Fan is heavy. Two people are recommended for laying fan on ground and standing fan upright.

Remove drain plug from bottom of fan. Allow water to drain, and then reinstall drain plug. **Do not tilt fan to remove or reinstall drain plug**.

Carefully lay fan on its side on the ground (*Fig. 1*). Remove caster screws and replace casters (*Fig. 1*). Tighten caster screws to **5 ft·lb (6.8 N·m)**. **Lock casters** and carefully stand fan upright.

Fig. 1

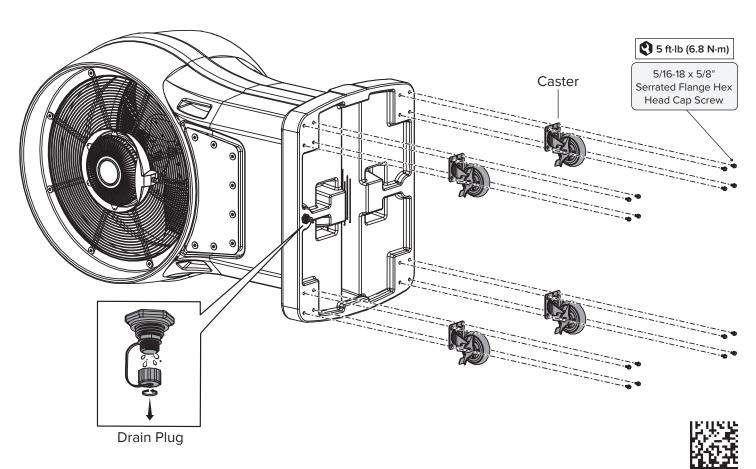

TOR-INST-462-MUL-01 Rev. A 03/13/2025