

Quick Installation Guide

AirGo® All Terrain




READ AND SAVE THESE INSTRUCTIONS

Support fan with at least four jack stands so that it is raised at least 10 in. (254 mm) to allow clearance during installation. Make sure fan is disconnected from power before beginning installation.

- 1** Position subassembly between the fan tubes. Raise it to the bottom flange of the side mounting bracket, and secure with the provided hardware. Repeat on other subassembly.
- 2** Align three holes in the side brace with the holes on the caster pad. Attach side brace to caster pad. Do not fully tighten the nuts until all bolts are in position.
- 3** Ensure the center-to-center distance between the rod ends of the steering cross-link is 86.5 in. (2197 mm). Attach cross-link to the brackets in the corners of the axles.

Two personnel are required during installation!

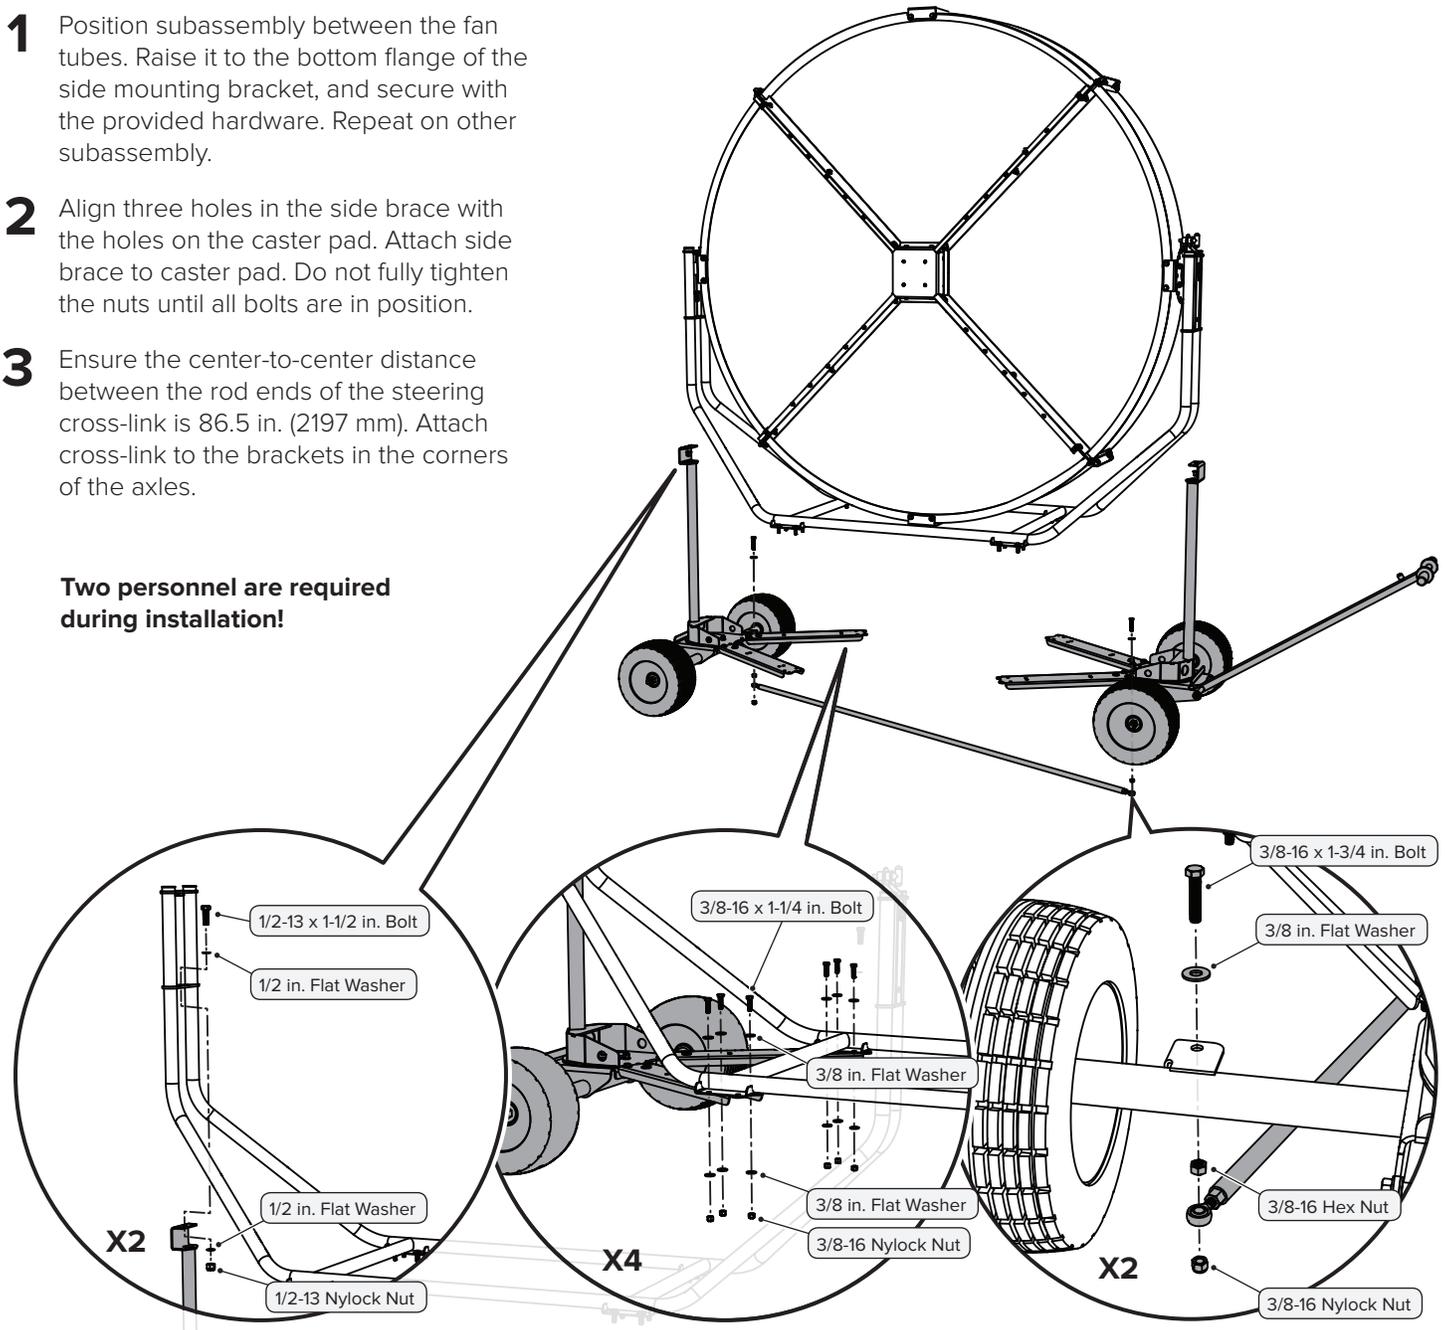

1 ATTACH SUBASSEMBLIES

2 SECURE SIDE BRACES

3 ATTACH STEERING CROSS-LINK



Operating Instructions and Maintenance:
bigfans.com/support

