


BIG ASS FANS[®] HORNET MAINTENANCE

Please take a few moments each year to perform the following preventive maintenance inspection on your fan to ensure its safe and efficient operation.

- ☑ **Clean the fan.** Remove the bolts and washers securing the bottom guard (and top guard, if installed) to the housing to access the fan blade assembly. Dust the blades, housing, and motor. If desired, use a gentle cleaner or degreasing agent. Do **not** use Clorox[®] or other chlorine-based cleaners. This could result in the release of toxic/fatal fumes.
- ☑ **Inspect the mounting cables for fraying or damage.**
- ☑ **Inspect all fasteners, the mounting system, and the fan assembly for signs of corrosion, cracking, or fatigue/severe wear.** Replace if needed.
- ☑ **Make sure all plugs are fully seated and the cord retainers are properly installed. Check all cords and plugs for damage/wear.**
- ☑ **Make sure the set screw securing the blade assembly to the motor is torqued to 150 in·lb (17 N·m) and that the blade retainer is secure.**
- ☑ **When reinstalling the fan guard(s), torque the bolts to 20 ft·lb (27.1 N·m).**
- ☑ **Verify proper fan rotation. The fan should be rotating counterclockwise when viewed from the floor.**
- ☑ **Verify proper operating speed. See the [installation guide](#) for speed setpoint details.**

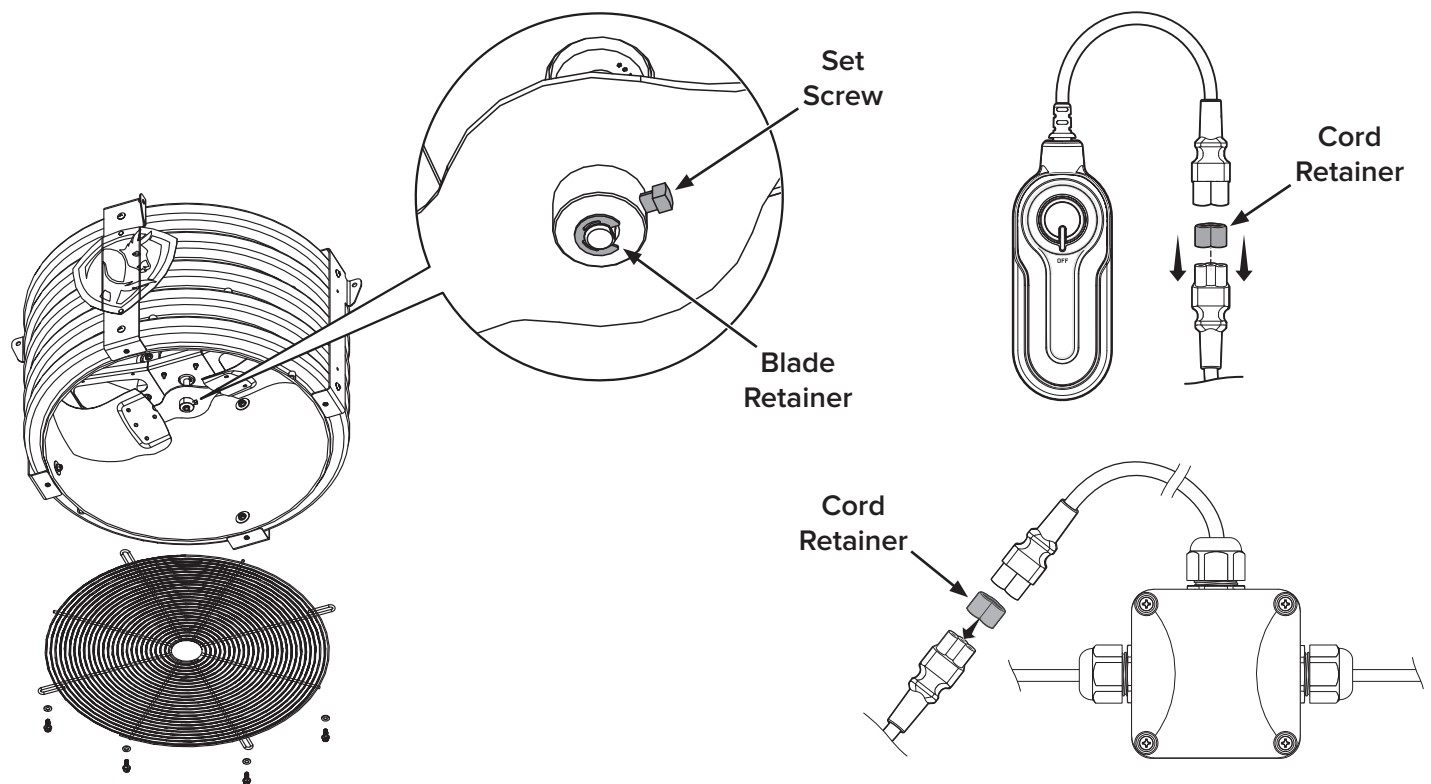

⚡ WARNING: Risk of fire, electric shock, or injury to persons during cleaning and user maintenance. Disconnect the appliance from the power supply before servicing.

⚠ WARNING: When service or replacement of a component in the fan requires the removal or disconnection of a safety device, the safety device is to be reinstalled or remounted as previously installed.